

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support

SPIT ROTISSERIE ROASTER GRILL

MODEL: JY-MY-KYLDB-35-120

JY-MY-KYLDB-35-220


We continue to be committed to provide you tools with competitive price. "Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually Saving Half in comparison with the top major brands.

VEVOR®

TOUGH TOOLS, HALF PRICE

SPIT ROTISSERIE
ROASTER GRILL

MODEL: JY-MY-KYLDB-35-120 / JY-MY-KYLDB-35-220

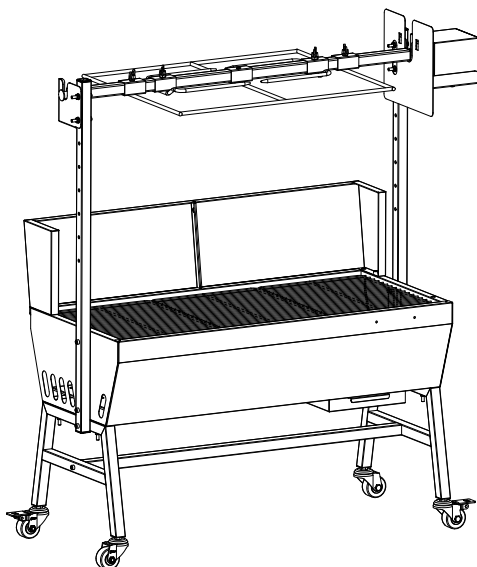





NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate
www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

	<p>Warning-To reduce the risk of injury, user must read instructions manual carefully.</p>
	<p>Pay attention to high temperatures to prevent burns.</p>
	<p>CORRECT DISPOSAL</p> <p>This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheeled bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices</p>
	<p>Compliance is a EC & UK security certification.</p>

FCC INFORMATION

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment!

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This product may cause harmful interference.
- 2) This product must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

Note: This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the distance between the product and receiver.
- Connect the product to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

IMPORTANT SAFEGUARDS

Thank you for using this product. In order to make sure that you can operate the machine correctly, read this instruction carefully before operating it and keep it properly for future reference. Please read this page's precautions and safety rules to ensure your safe use. This manual will outline safety warnings, precautions, and operating, maintenance, and cleaning. The warnings and instructions reviewed in this manual cannot cover all possible conditions and situations that may occur. Caution and common sense are not built into this product since the uses will comply with these codes. Please consult a doctor before starting a training program or engaging in strenuous endurance activity on the device. Please read ALL the instructions before using your machine.

1. Make sure the voltage in your outlet is the same as the voltage indicated on the appliance's rating label.
2. Do not let children and minors get close to or touch the machine.
3. Do not touch the hot surface directly with your hands. Always operate with handle or knob.
4. To prevent electrical shock, do not immerse the cord or plug into water or other liquids.
5. Do not immerse the appliance in water or any other liquid.
6. Unplug the machine from the outlet when not in use and before cleaning. Cool the appliance before installing or removing parts and before cleaning.
7. Cool down the HOT parts before operation.
8. Do not operate the device with damaged cord or plug, malfunction or with any mechanical damage. Send it to your nearest authorized service centre for examination and repair (ONLY technicians should open up the unit).
9. Using any accessories or attachments that are not provided or recommended by the manufacturer may cause injury.
10. If the machine is not to be used for a long period of time, unplug it, clean and cover it and store it in a dry and safe place.
11. Do not leave the power cord hanging over the edge of table or counter or let it

come into contact with any hot surfaces.

12. Do not place the unit on or near hot air, electric burners or heaters.

13. Always switch off the power before plugging in or unplugging. Hold the plug instead of pulling on the cord.

14. Do not apply this unit to any other purposes than the indicated usage.

15. Do not use it indoor.

16. KEEP IT OUT OF CHILDREN'S REACH.

17. DO NOT CLEAN IT WITH ANY ABRASIVE MATERIAL.

18. Never leave it unattended while in use.

19. Always check that this machine is plugged into a grounded outlet with the appropriate electrical supply. Ensure that the wall outlet being used is properly grounded. If not, you must install a grounded outlet. Have the work performed only by a certified electrician who is properly qualified to meet local safety and electrical codes.

20. Ensure that the power outlet, plug and cord being used are in good working condition. Damaged components should be repaired by a certified electrician who is qualified to meet local safety and electrical codes. Even if your power cord is functioning properly, keep it away from water and avoid letting it run over carpets or heating devices.

21. Avoid using it in the presence of flammable liquids, gases, dust or other explosive situations.

22. Extreme caution must be taken when moving an appliance containing hot oil or other hot liquids.

23. Do not operate the machine in an appliance garage or under a wall cabinet. Always unplug the unit from the electrical outlet when storing in an appliance garage. Otherwise, it would cause a risk of fire, especially if the machine touches the garage wall or the door touches it as it closes.

24. Type Y attachment: If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.

25. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards

involved. Children shall not play with the machine alone. Cleaning and user maintenance shall not be made by children without supervision. Pets should stay away from the product.

ATTENTION!

This article is intended for outdoor use. Do not use indoors!

PRODUCT PARAMETERS

Model No.	Region	Voltage	Power	Plug Type
JY-MY-KYLDB-35-120	North America	AC120 60Hz	42W	American PLUG
JY-MY-KYLDB-35-220	Europe	AC220V 50Hz	42W	Europe PLUG
JY-MY-KYLDB-35-220	Australia	AC240V 50Hz	42W	Australia PLUG

ATTENTION!

1. The voltage used for this device must be the same as the power supply voltage.

LOADING CAPACITY

Model No.	Loading Capacity
JY-MY-KYLDB-35-120	Max 90 lb (40.8Kg)
JY-MY-KYLDB-35-220	Max 90 lb (40.8Kg)

ATTENTION!


1. Do not exceed the listed weight capacity. Be aware of dynamic loading! The sudden load movement may briefly create an excess load, causing product failure.

PRODUCT COMPONENTS

1. Check all parts for completeness before beginning assembly.
2. To avoid accidents or sharp edges injuries please assemble and use carefully.





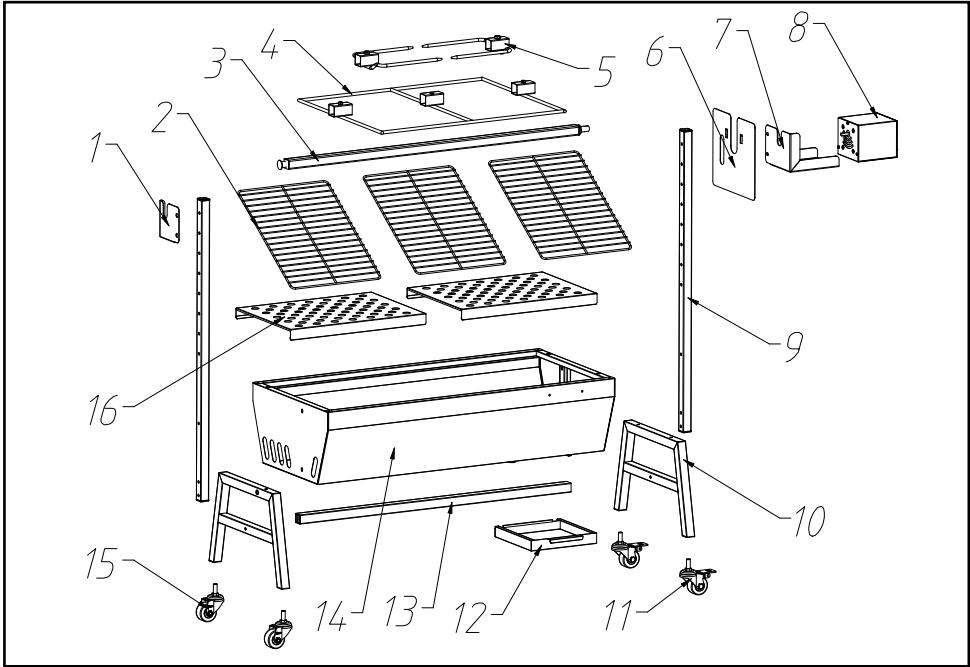





For assembly you need a screwdriver and different screw wrenches. 2 persons are needed to assemble the product. Wear safety work gloves during assembly.

Note: the quantity of parts shown in the manual is the actual usage and the unused parts are spare parts.




No.	Part name	Qty	No.	Part name	Qty
1	Spit bracket	1	9	Support tube	2
2	Grill	3	10	Support foot	2
3	Spit	1	11	Wheel w/ brake	2
4	Fixed mount	1	12	Slag receiving tray	1
5	Roasting fork	2	13	Foot connection tube	1
6	Fire deflector	1	14	Grill body	1
7	Motor support plate	1	15	Wheel w/o brake	2

8	Motor	1	16	Charcoal tray	2
---	-------	---	----	---------------	---

No.	Part name	Qty	No.	Part name	Qty
A	M8*15 	4	F		1
B	M6*10 	2	G		1
C	M6*45 	16	H		2
D	M6 	12	I		2
E		1	J		1


STEP1

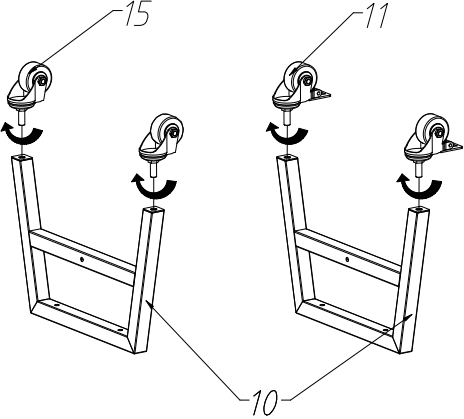

Install four casters on the support foot, rotate and tighten them in the direction of the arrow, and install casters 1 (with brake) on the same support foot.

STEP2


C:M6*45-6PCS D:M6-4PCS

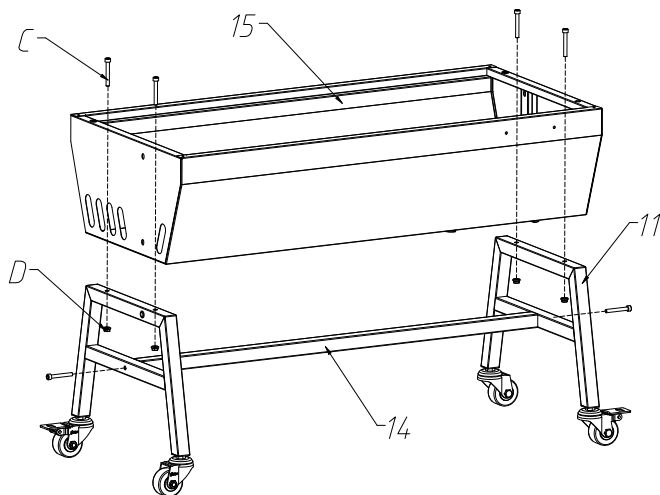

Fix the support foot and Grill body with M6*45hexagon screws and M6 flange nuts .

STEP3


C:M6*45-6PCS D:M6-4PCS

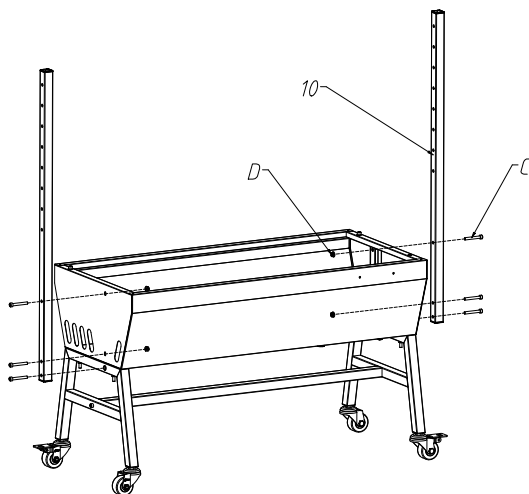

Fix the bracket and furnace body with M6*45 hex bolts and M6 butterfly nuts.

STEP4


B:M6*10-9PCS D:M6-4PCS

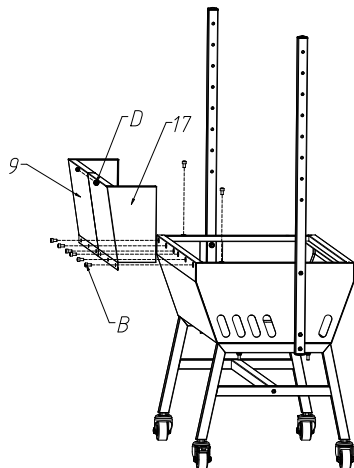

The left and right windshields and grill body are fixed with M6*10 hexagon screws, and the left and right windshields are fixed with M6*10 hexagon screws and M6 flange nuts.


STEP5

C:M6*45-4PCS D:M6-4PCS

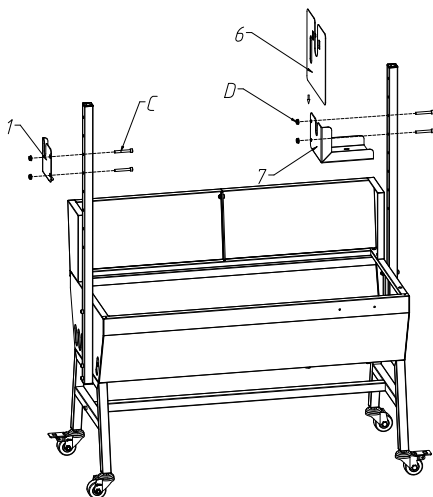

The fire shield plate is positioned onto the motor support plate, which is then aligned with the support pipe hole, adjusted to the appropriate height, and secured in place using M6*45 hexagonal screws and M6 flange nuts. The Spit bracket is then placed at the corresponding position on the other support pipe.


STEP6

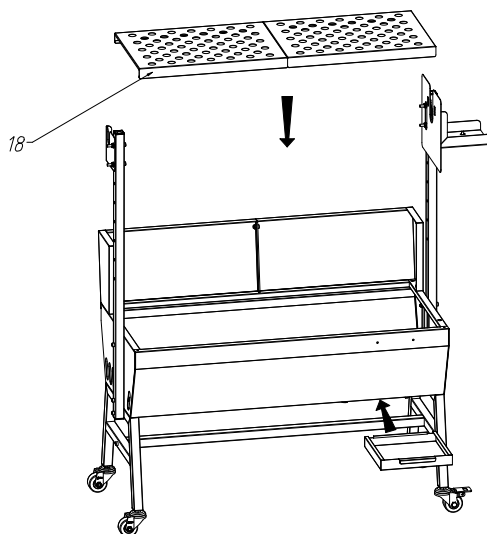

Place the charcoal tray in the grill body .Insert the slag tray under the grill body


STEP7

A:M8*15-4PCS

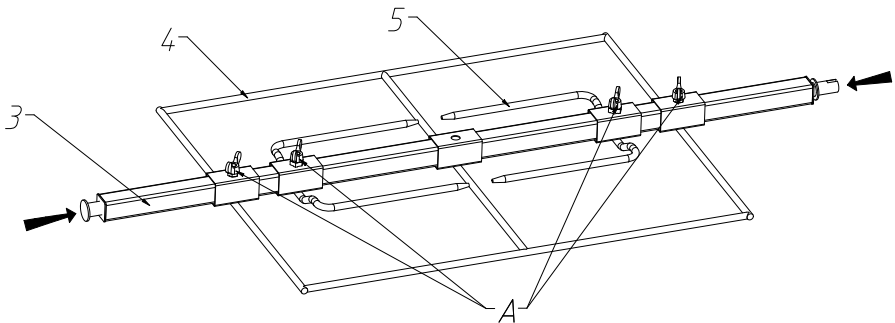


As shown in the picture above, secure the food on a grilling fork or Fixed mount, and then secure the grilling fork or Fixed mount to the grilling rod using an M8*15 butterfly screw.

STEP8

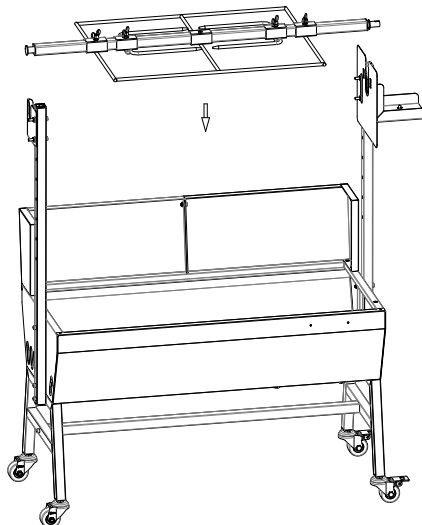


Put the food and barbecue fork together on the motor support plate and spit bracket.

STEP9

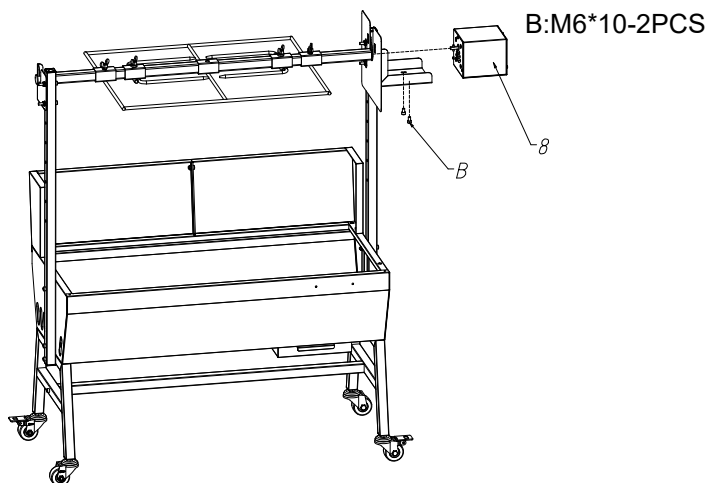



Place the motor on the motor support plate and insert it into the Spit, and then lock it with M6*10 hex socket screws. The installation is complete. Put the charcoal on the charcoal plate, light the fire, you can roast sheep and other large foods

STEP10

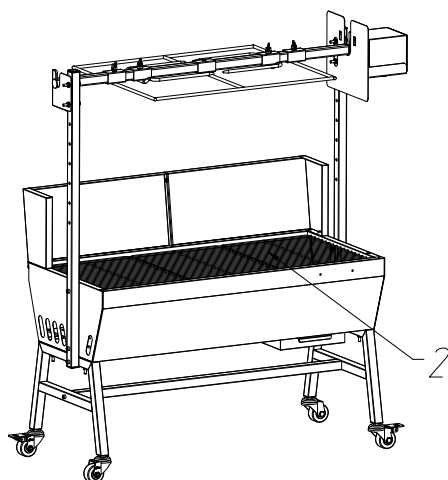

The grills are placed on the grill body to roast meat and other food at the same time.

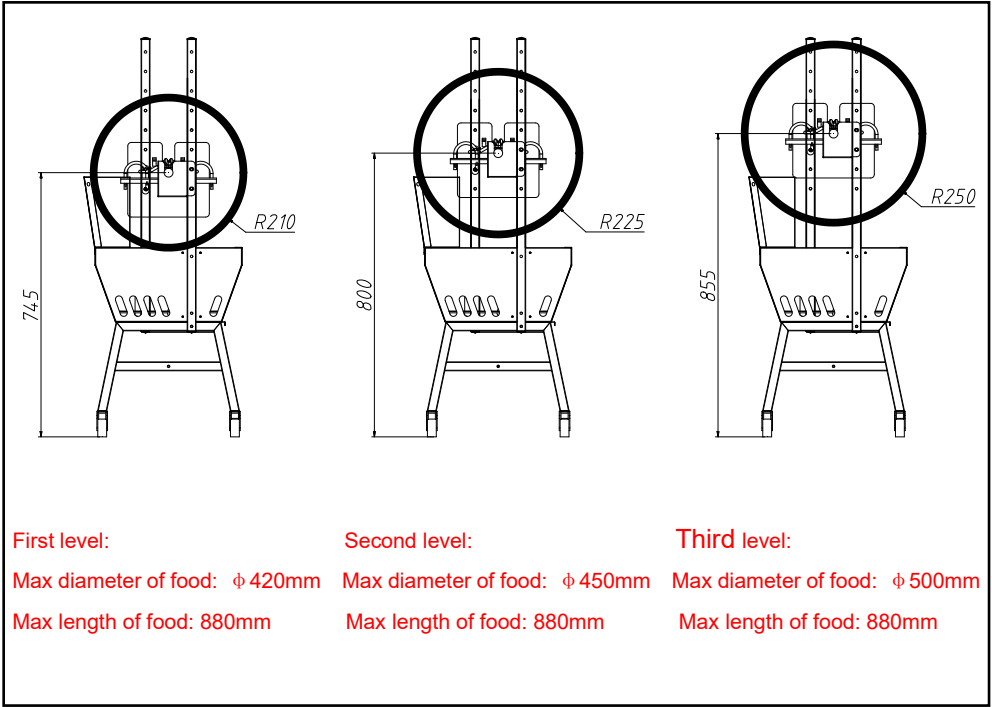


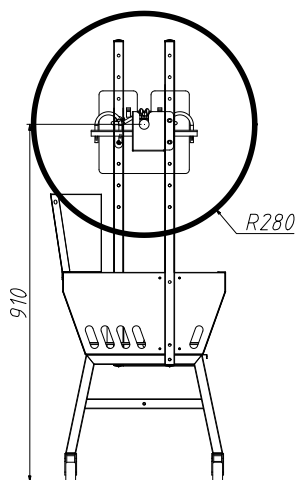

Fourth level:

Max diameter of food: $\phi 560\text{mm}$


Max length of food: 880mm

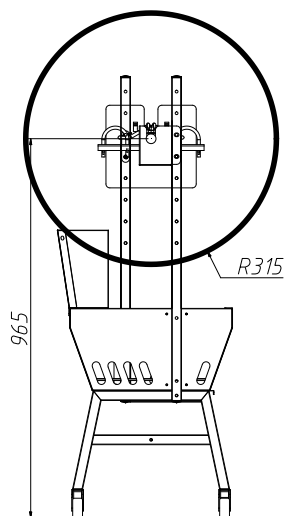

Fifth level:

Max diameter of food: $\phi 630\text{mm}$


Max length of food: 880mm

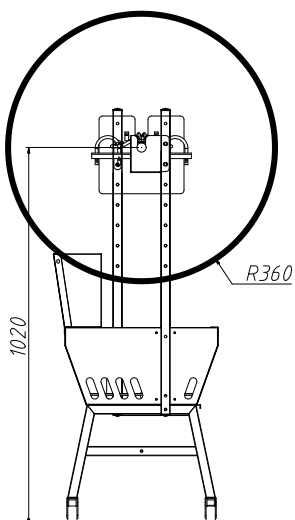

Sixth level:

Max diameter of food: $\phi 720\text{mm}$

Max length of food: 880mm

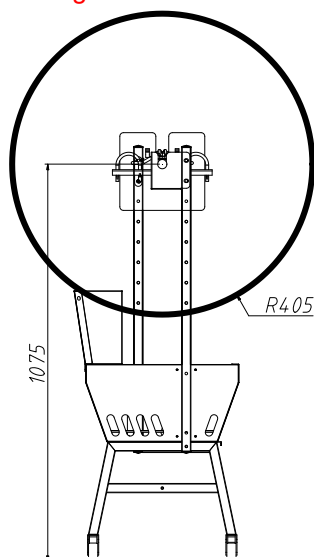

Seventh level:

Max diameter of food: $\phi 810\text{mm}$

Max length of food: 880mm

OPERATING INSTRUCTIONS

Before using the appliance for the first time, peel off any promotional materials and packaging materials, and check that the cooking plates are clean and free of dust. If necessary, wipe them over with a damp cloth. Spread over with an absorbent kitchen towel and wipe off any excess oil. When your product is heated for the first time, it may emit slight smoke or odor, which is normal for many heating appliances, and will not affect the safety of your appliance.

1. Place the machine on a clean, dry, level surface near a plug base outlet.
2. Distribute the solid firelighters in the center of the fire box.
3. Stack up the charcoal in a pyramid above the firelighters.
4. Light the solid firelighters with a match.
5. Grease the grill with some vegetable oil and start grilling.
6. Only place food on the grill after the fuel is covered with an ash layer.
7. Plug the cord into the wall outlet.
8. Use the ventilation slider to control the amount of air supplied to fuel from the bottom.(Only applicable for appliance with ventilation slider)

ATTENTION!

1. Do not move while the appliance is hot.
2. Due to safety reasons do not use this appliance with liquid fuels.
3. We strongly recommend that the bbq rotisserie grill shall be heated up and the fuel kept red-hot for at least 30 min prior to the first cooking;
4. Do not leave the appliance unattended during use.
5. Do not use the appliance near flammable objects (keep at a safe distance, at least 3 meters).
6. Do not leave the appliance unattended during use.
7. Do not cook before the fuel has a coating of ash.
8. If the motor is suddenly stuck, abnormal noise, smoke and other undesirable phenomena are found during the barbecue process, immediately cut off the power supply, and restart it after the maintenance is completed.

9. Always turn the rotisserie motor to “OFF” before opening the grill.



WARNING! This product rotisserie grill will become very hot, do not move it during operation.

WARNING! Keep children and pets away.

WARNING! In case of the danger of carbon monoxide poisoning, do not use the product rotisserie grill indoors.

WARNING! Do not use the barbecue in a confined and/or habitable space e.g. houses, tents, caravans, motor homes, boats.

WARNING! Remove all packaging materials and keep them for future use. Packaging materials are not a toy.

WARNING! Don't let children play with the packaging materials. If they swallow the packaging materials, they will suffocate!

ATTENTION! Always wear gloves when adjusting the grill, the handles of the grill can become very hot during the grilling process.

IMPORTANT! Do not pour water into the appliance while it is still hot.

IMPORTANT! Close the ventilation slider to extinguish the appliance. (Only applicable for appliance with ventilation slider)

COOKING TIPS & HINTS

1. Always wash your hands before and after handling uncooked meat and before eating.
2. Always keep raw meat away from cooked meat and other foods.
3. Before cooking, ensure grill surfaces and tools are clean and free of old food residues.
4. DO NOT use the same utensils to handle cooked and uncooked foods.
5. Ensure all meat is cooked thoroughly before eating.

CAUTION:

1. Eating raw or under cooked meat will cause food poisoning (e.g. bacteria strains such as *Escherichia coli*).
2. To reduce the risk of under cooked meat, cut the meat to ensure it is fully cooked.
3. If the meat is fully cooked, its juice should be clear and there should be no pink / red juice or traces of meat color.
4. Cooking larger pieces of meat and joints is recommended before finally cooking on the grill.
5. After cooking on your grill always clean the cooking surfaces and utensils.

CLEAING MAINTENANCE AND STORAGE

1. For cleaning, wipe the surface with a damp (not wet) cloth or wipe dry with a clean lint free cotton cloth.
2. Window cleaning liquid or a similar cleaning liquid can be used to clean the surface.
3. Always unplug the machine before storage.
4. Always make sure the machine is cool and dry before string.
5. Store the appliance in a dry and clean area.